



# PHOTOFLEX®

ChangingRoom Instructions • Item#: 870031 (AC-CR001)



Figure 1.



Figure 2.



Figure 3.



Figure 4.



Figure 5.



Figure 6.



Figure 7.



Figure 8.

## ChangingRoom

The ChangingRoom comes flat in its handy carrying case.

1. Remove the ChangingRoom from the carrying case.
2. Identify the two loop handles on the product. One on the outside edge and one inside the folded ChangingRoom.
3. Holding both handles, pull outward to expand the bag to its full size.
4. It's that simple!
- 5-8. To collapse the ChangingRoom reverse the above steps.

NOTE: It may seem like you are forcing the unit to collapse but using this method will not damage it.

## CAUTION!

Each individual bag is NOT tested for light leaks.

To ensure bag is light proof, be sure to test with a sheet or roll of film prior to use.

Also be sure to zip both zippers closed as well as ensure your arms are inserted to the elbow when using this ChangingRoom.

### PHOTOFLEX® WARRANTY

- Warranties only cover manufacturer's defects and workmanship.
- We reserve the right to inspect all merchandise returned (end users and dealers) for warranty fulfillment.
- All returns must be pre-approved with Return Manufacturers Authorization obtained from Photoflex/PromarkBRANDS.
- A receipt showing date of purchase will be required for all returns.
- Freight must be paid by the customer or dealer.
- Warranties are valid only from date of Original Purchase.

Customer Support (831) 786-1370

E-mail: [sales@photoflex.com](mailto:sales@photoflex.com)

Photoflex is a division of PromarkBRANDS, Bartlett, IL USA.

©2016 ALL RIGHTS RESERVED. Photoflex® and the Photoflex logo are trademarks or registered trademarks of Photoflex and/or its affiliates in the U.S. and other countries.