



PRINT WASHER

Drain hose at bottom
removes hypo.

Intake hose attaches
to garden hose threaded faucet.

Regulate water flow
so it will not fill
higher than the
overflow holes at end.

REGAL PHOTO PRODUCTS INC
2769 SOUTH 34th STREET
MILWAUKEE, WI 53215
1-800-695-2055